Panasonic Telephone Systems

Advanced Hybrid System

Panasonic KX-TA1232



Phone: 877-289-2829

Panasonic KX-TA1232, KXTA1232, TA1232, KX-TA123260, KX-TA123270, KX-TA123280, KX-TA123291, KX-TA123293, KX-T77, KX-T73

Advanced Hybrid System

KX-TA1232

User Manual Addendum for **KX-T77** and **KX-T73** Series

This User Manual Addendum provides the additional information about the KX-T77 and KX-T73 Series Telephones and the Panasonic Advanced Hybrid System, KX-TA1232.



For more information call 877-289-2829 or visit www.voicesonic.com

Table of Contents

System Components Table	3
Location of Controls	4
Initial Settings	8
Feature Buttons & a Lamp	10
Call Information/Log, Incoming	12
Call Log, Incoming	12
Additional Information for Station Features and Operation	14
Answering, Direct Outside (CO) Line	14
Caller ID Call Waiting	14
Hands-free Answerback	14
Hands-free Operation	14
Microphone Mute	14
Room Monitor	14
Display Evample for KY-T7735	15


 $The following \ Panasonic \ Proprietary \ Telephones \ and \ a \ DSS \ console \ are \ available \ for \ KX-TA1232.$

System Components Table (Additional)


	Model	Description		
Telephone	KX-T7735	Proprietary Telephone with 16-character/3-line and backlit display and Message/Ringer Lamp		
	KX-T7730	Proprietary Telephone with 16-character/1-line and backlit display and Message/Ringer Lamp		
	KX-T7720	Proprietary Telephone with Message/Ringer Lamp		
	KX-T7750	Proprietary Telephone with Message/Ringer Lamp and MONITOR button		
	KX-T7335	Proprietary Telephone with 16-character/1-line and backlit display		
	KX-T7320	Proprietary Telephone		
	KX-T7350	Proprietary Telephone with MONITOR button		
Optional Equipment	KX-T7740	DSS Console		


Location of Controls

KX-T7735

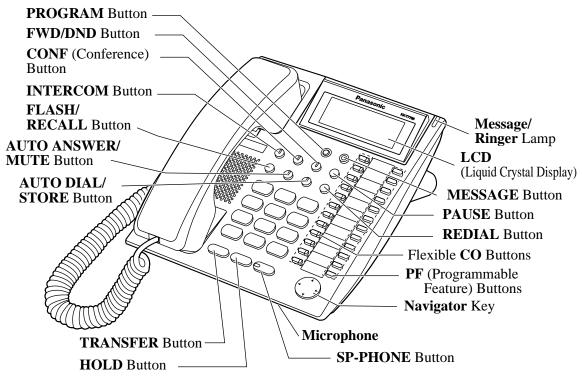



KX-T7730

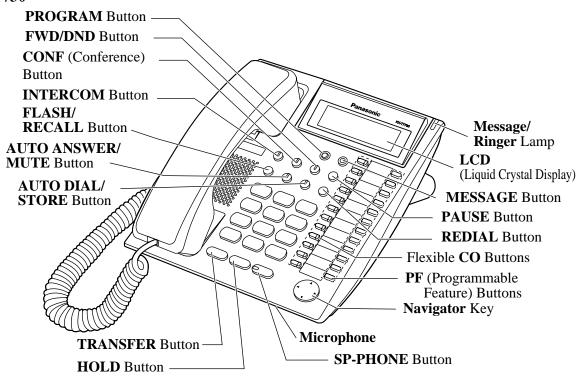

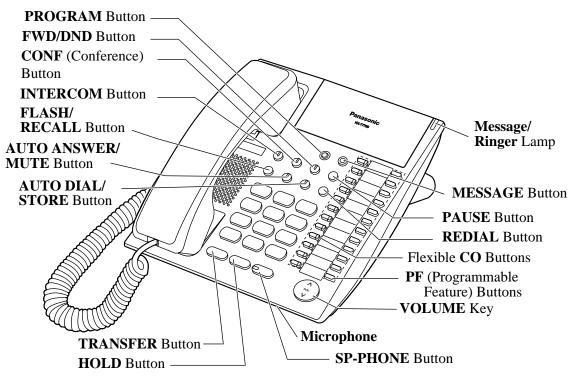



KX-T7750

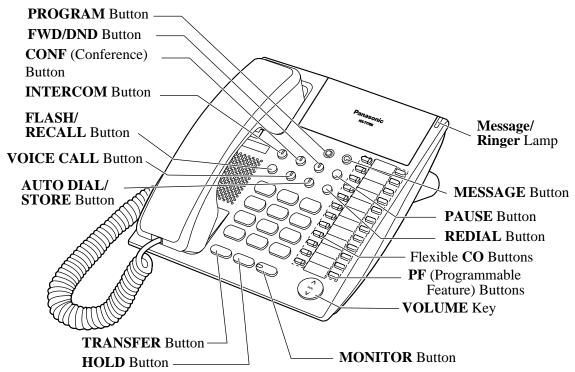

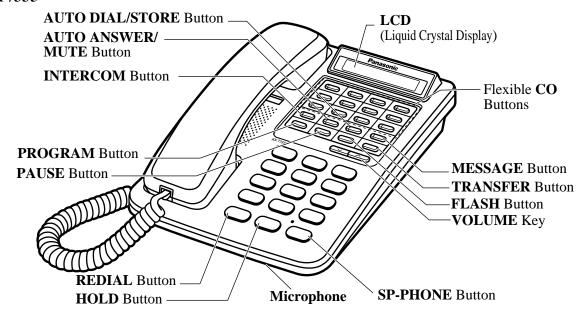


KX-T7320

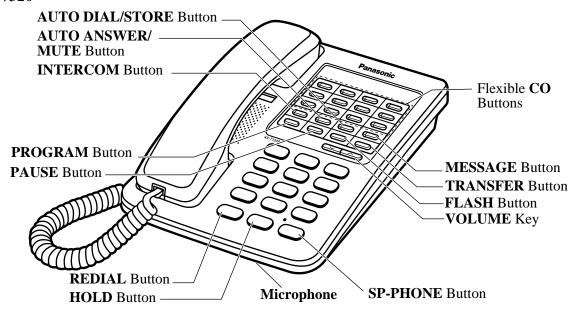


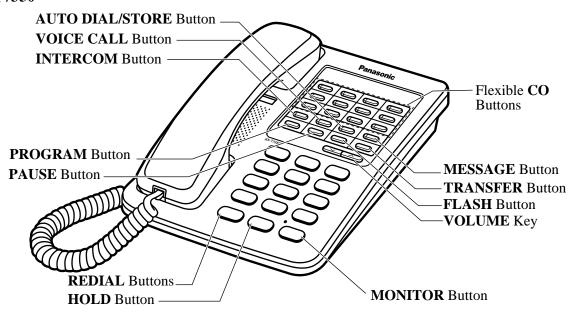


<Side View of KX-T7735, KX-T7730, KX-T7720 and KX-T7750>

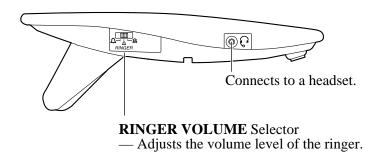

<Back View of KX-T7335, KX-T7320 and KX-T7350>

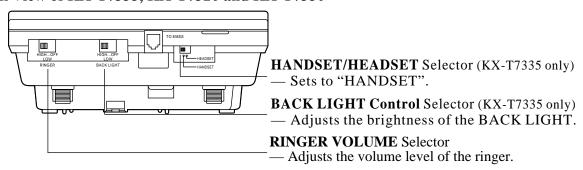


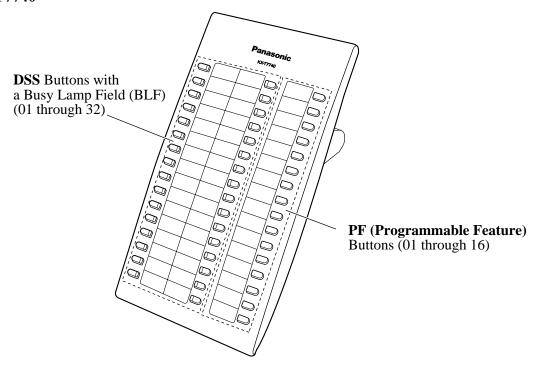

Initial Settings

Display Contrast Adjustment (KX-T7735 and KX-T7730 only)

The Navigator Key is used to adjust the display contrast*.

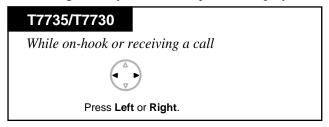

BACK LIGHT Adjustment (KX-T7335 only)

The BACK LIGHT Control Selector is used to adjust the brightness of the BACK LIGHT.




Volume Control — Handset Receiver/Headset/Ringer/Speaker


Allows you to adjust the following volume settings as necessary.

- Handset Receiver volume
- Headset volume
- Ringer volume
- Speaker volume


To adjust the handset receiver/headset volume*

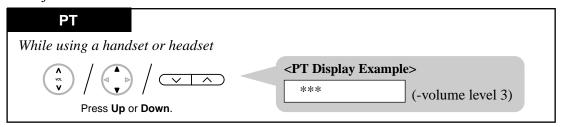

To adjust the ringer volume

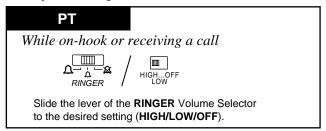

To adjust the speaker volume

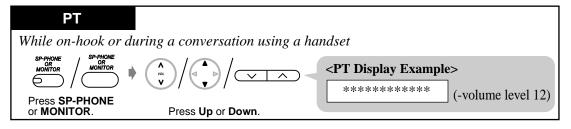

* The above settings may be initialized to default settings after the telephone line cord is pulled off or the main unit's power is interrupted.

Feature Buttons & a Lamp

Buttons & Lamp	T7735/T7335	T7730	T7720/T7320	T7750/T7350
AUTO ANSWER/MUTE	~	~	~	
AUTO DIAL/STORE	✓	~	·	✓
СО	✓ (12)	✓ (12)	✓ (12)	✓ (12)
CONF	✓ (for T7735)	✓	✓ (for T7720)	✓ (for T7750)
FLASH/RECALL*	✓	✓	·	✓
FWD/DND	✓ (for T7735)	~	✓ (for T7720)	✓ (for T7750)
HOLD*	~	✓	~	✓
INTERCOM	~	✓	~	✓
MESSAGE* (*: T77 series only)	~	✓	~	~
MONITOR				✓
Navigator Key*	✓ (for T7735)	✓		
PAUSE*	~	~	·	✓
PF*	✓ (12) (for T7735)	✓ (12)	✓ (12) (for T7720)	✓ (12) (for T7750)
PROGRAM*	~	✓	~	✓
REDIAL*	~	✓	~	✓
SP-PHONE	~	✓	~	
TRANSFER*	✓	✓	·	✓
VOICE CALL				✓
Volume Key*	✓ (for T7335)		·	✓
Message/Ringer Lamp	✓ (for T7735)	✓	✓ (for T7720)	✓ (for T7750)

[&]quot;

" indicates the button is available.

^{*:} The button is not provided with an LED (Light Emitting Diode).

⁽x): Shows the number of buttons only if more than one button is provided.

Usage for buttons and a lamp

MESSAGE Button:

Used to leave a message waiting indication, or to call back the party who left a message waiting indication at your extension. This button is provided with an LED, except for the KX-T77 series telephones. With these telephones, the Message/Ringer Lamp is lit when a message waiting indication is left at your extension.

Navigator Key (KX-T7735 and KX-T7730 only):

Used to adjust the volume and the display contrast or select desired items for each function.

PROGRAM Button:

Used to enter and exit the Programming mode.

VOICE CALL Button (KX-T7750 and KX-T7350 only):

Used to receive a notification via monitor in place of ringing.

Volume Key:

Used to adjust the volume.

Message/Ringer Lamp (KX-T77 series only):

Used to inform you visually that you have an incoming call or message.

The table below shows the lighting patterns for the Message/Ringer Lamp.

Lamp	Status
Flashing	You have an incoming call.
On	You have a message.


Note

As for the usage for other buttons, please refer to the User Manual.


Call Information/Log, Incoming (Additional)

Display Operation (- for the KX-T7735)

While receiving an incoming outside call, the display shows as follows:




- 1. Lift the **handset** or press the **SP-PHONE** button.
 - The display changes as follows:




Call Log, Incoming (Additional)

You can log the incoming outside call information from the Caller ID service*1 into the system (the Personal/Common Area) when a call is answered.


Logging the call information into the Personal Area

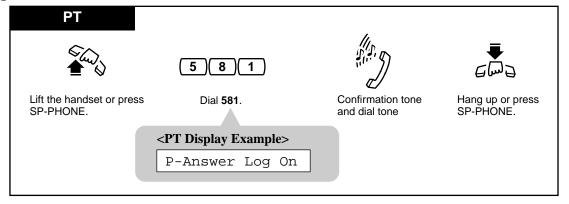

Logging the call information into the Common Area

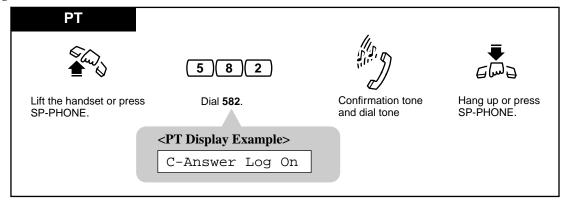

Canceling logging the call information to restore the default*2

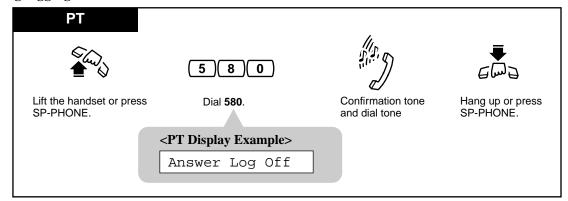


Note

- *1 The Caller ID service provides you with the caller's information, such as the name and telephone number, on the outside (CO) line assigned to receive Caller ID service calls. Please refer to the Installation Manual.
- *2 Default: The call information is logged only when a call is not answered.
- The display of the KX-T7730 or KX-T7335 shows the same as other 1-line display PTs (e.g., KX-T7135). For further details about 1-line display, please refer to the User Manual.
- You can set to log the call information into both of the Common Area and the Personal Area simultaneously.

Confirming

Display Operation (- for the KX-T7735)

- 1. Confirm the number of logged calls.
- 2. Press the Caller ID Indication button to see the incoming call information.
 - The display changes as follows:



To scroll the display, press **◄►** or the FWD/DND button.

The information of the answered call is displayed as an New one.

Additional Information for Station Features and Operation

The following features are available with PTs depending on the type of the KX-T77 or KX-T73 series.


Telephone Features	T7735/T7335	T7730	T7720/T7320	T7750/T7350
Answering, Direct Outside (CO) Line	~	~	~	
Caller ID Call Waiting	✓	~		
Hands-free Answerback	✓	~	~	
Hand-free Operation	✓	~	~	/ *
Microphone Mute	✓	V	~	
Room Monitor	~	~	~	


^{*} The MONITOR button on the KX-T7750 or KX-T7350 can be used for hands-free dialing, etc., but it cannot be used for a hands-free conversation.

<u>Note</u>

As for other station features, please refer to the User Manual.

Display Example for KX-T7735

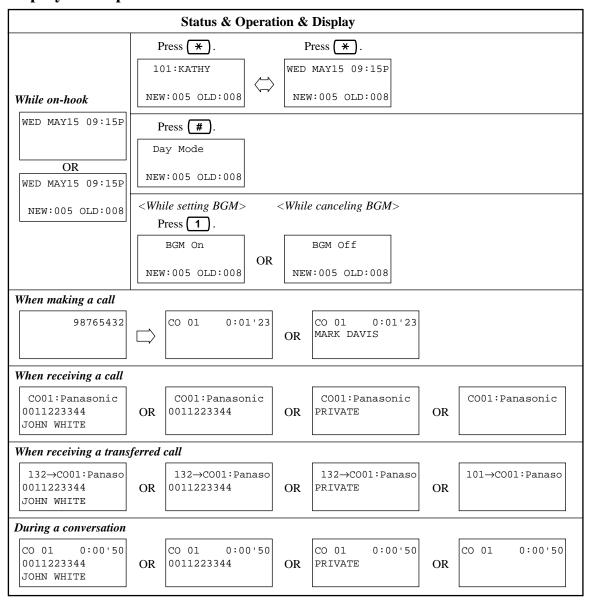

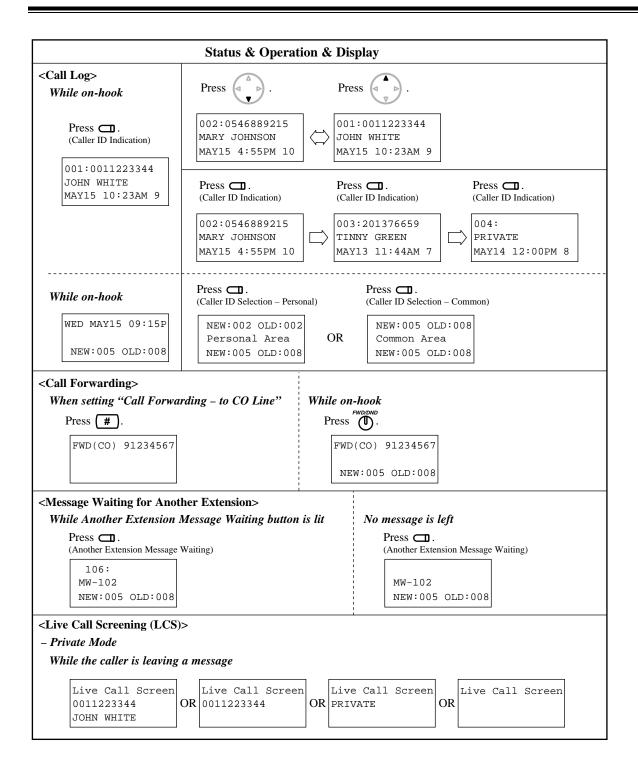





www.voicesonic.com Phone: 877-289-2829